


- Adopt thermoplastic crust, compact construction, and Simple installation;
- May install the protecting cap, can against oil and dustproof;
- Hand reset and automatic reset for flexible choice;
- Widely used in Electrical equipment ,automatic machine, communication equipment and instrument, electro motion tool etc.



Model & Meanings


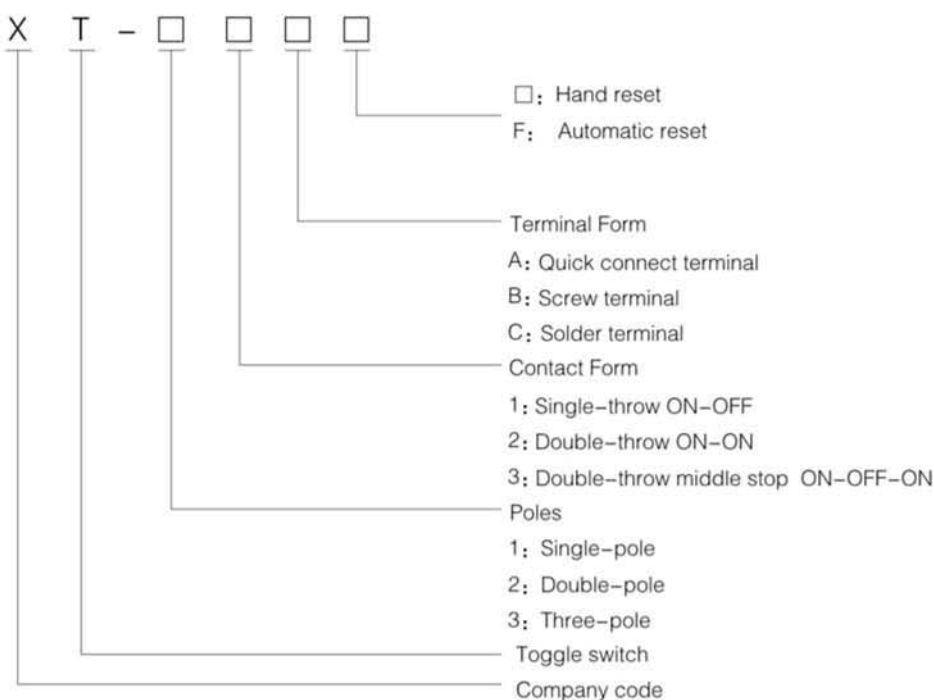


Mounting Holes & Product Structure

MMTS







MXT

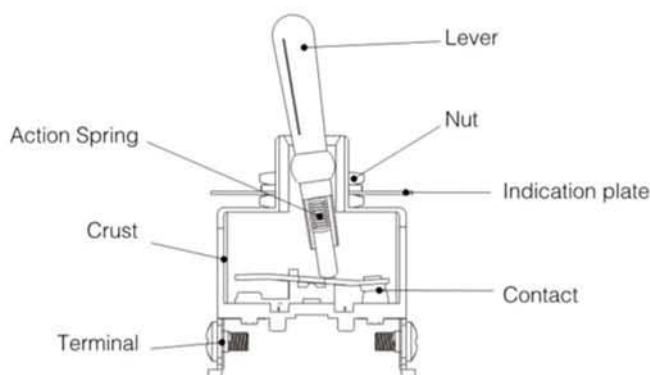


Item	Data	
Rating load	15A/250VAC, 25A/250VAC	MTS: 6A/125,250V
Operation frequency	30times/min	
Insulation resistance	100MΩ (Above) DC500V	
Contact resistance	25mΩ (initial value)	
Withstand voltage	Non-connection wire	1000VAC
	Every terminal	1500VAC
Vibration	Misoperation	10-55Hz Amplitude 1.5mm
Impact	Durable	1000m/s ²
	Misoperation	300m/s ²
Life	Electrical	100,000 above
	Mechanical	500,000above
Protection degree	IP40	
Operating temperature	-25~+80°C	
Operating humidity	<85%	

Terminal Forms

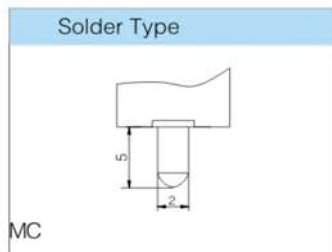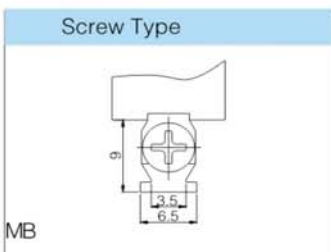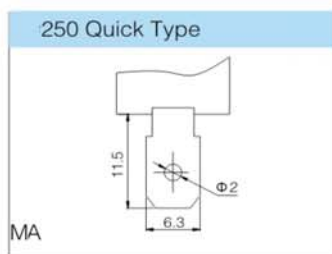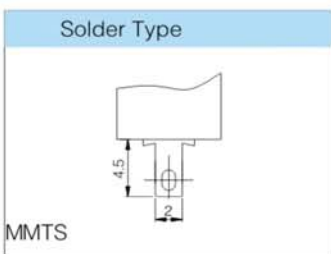


Dimensions


SPDT ON-ON
MMTS-102

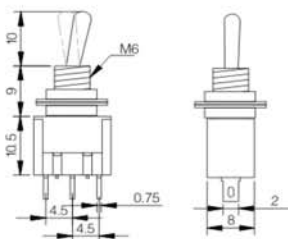


DPDT ON-ON
MMTS-202

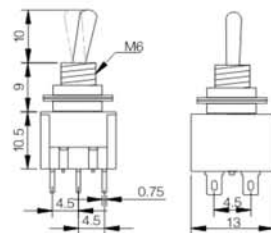


SPDT ON-OFF-ON
MMTS-103

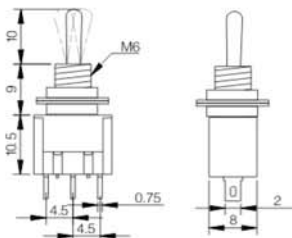


DPDT ON-OFF-ON
MMTS-203

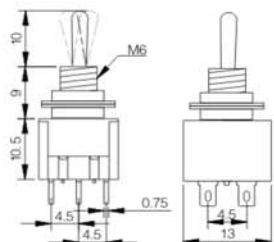


**SPST ON-OFF
MXT-11B**

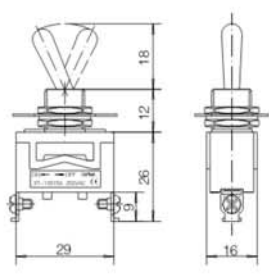


**DPDT ON-OFF-ON
MXT-23B**

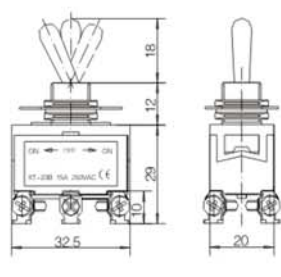


**SPDT ON-ON
MXT-12B**

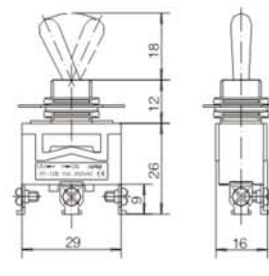


**SPST ON-OFF
MXT-11A**

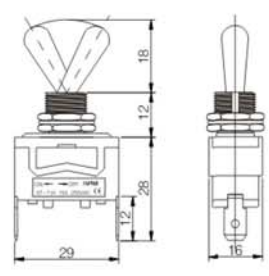


**SPDT ON-OFF-ON
MXT-13B**

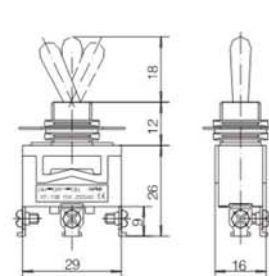


**SPDT ON-ON
MXT-12A**

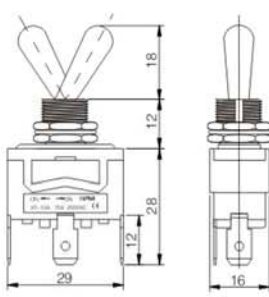


**DPST ON-OFF
MXT-21B**

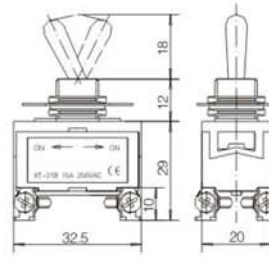


**SPDT ON-OFF-ON
MXT-13A**

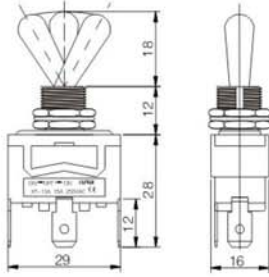


**DPDT ON-ON
MXT-22B**

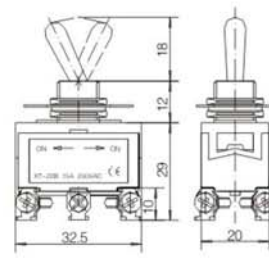



**DPST ON-OFF
MXT-21A**

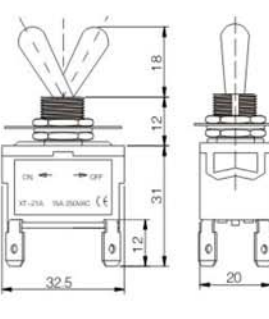


DPDT ON-OFF-ON
MXT-22A

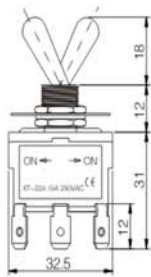


DPDT Auto Reset (ON)-OFF-(ON)
MXT-23BF

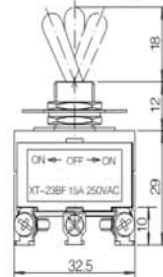


DPDT ON-OFF-ON
MXT-23A

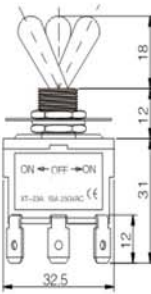


SPST Auto Reset (ON)-OFF
MXT-11AF

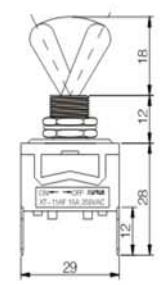


SPST Auto Reset (ON)-OFF
MXT-11BF

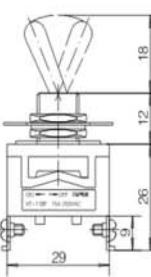


SPDT Auto Reset (ON)-OFF-(ON)
MXT-13AF

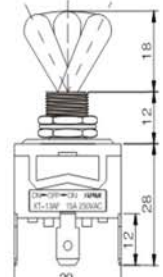



SPDT Auto Reset(ON)-OFF-(ON)
MXT-13BF

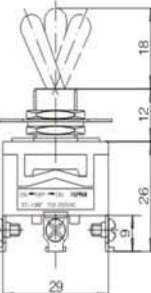


DPST Auto Reset (ON)-OFF
MXT-21AF

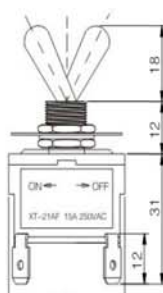



DPST Auto Reset (ON)-OFF
MXT-21BF

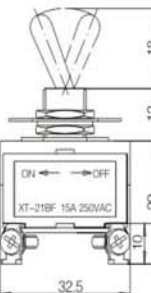



DPDT Auto Reset (ON)-OFF-(ON)
MXT-23AF

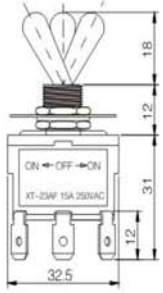


SPST ON-OFF
MXT-11C

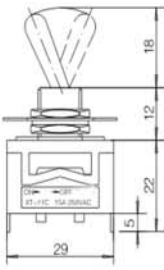


DPDT ON-OFF
MXT-23C

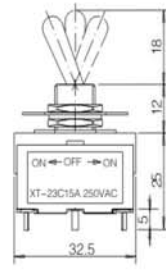


SPDT ON-ON
MXT-12C

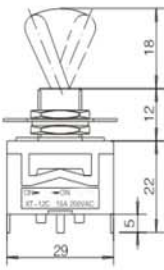


SPST Auto Reset (ON)-OFF
MXT-11CF

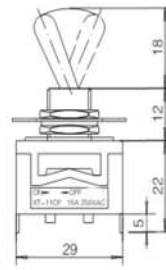



SPDT ON-OFF-ON
MXT-13C

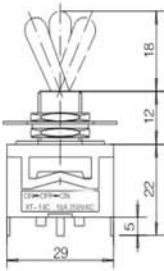



SPDT Auto Reset (ON)-OFF-(ON)
MXT-13CF

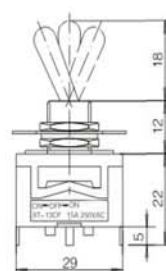



DPST ON-OFF
MXT-21C

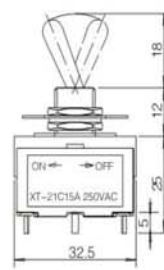


DPST Auto Reset (ON)-OFF
MXT-21CF

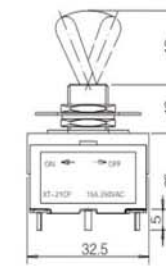



DPDT ON-ON
MXT-22C

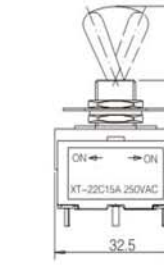


DPDT Auto Reset (ON)-OFF-(ON)
MXT-23CF

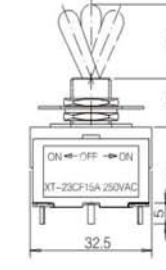



TPST ON-OFF
MXT-31B

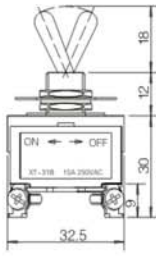


TPST ON-OFF
MXT-31A

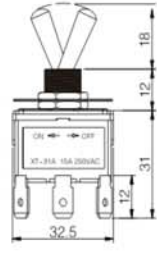



TPDT ON-ON
MXT-32B

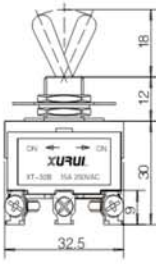


TPDT ON-ON
MXT-32A

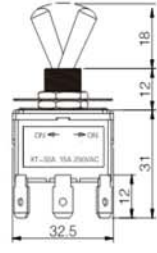



TPDT ON-OFF-ON
MXT-33B

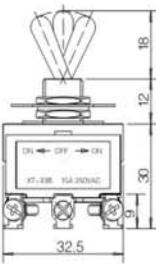


TPDT ON-OFF-ON
MXT-33A

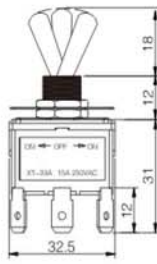

TPST Auto Reset (ON)-OFF
MXT-31BF

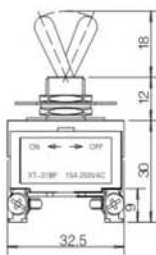

Protecting Cap
MXT-HT

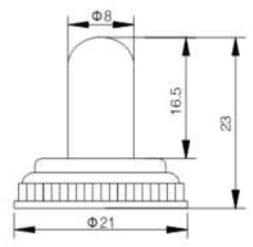

TPDT Auto Reset (ON)-OFF-(ON)
MXT-33BF

